

C A U T I O N

DO NOT STAND OR LEAN OVER THE GAUGE AT ANY TIME

PLEASE, ALWAYS USE ONLY 175 PARTS AS REPLACEMENTS FOR WORN PARTS OF THE NO. 175 MGM TANK GAUGE.

1. It is recommended that the packing be replaced every two years or less for heavy usage and check the Rod Latch at the same time. MGM cannot be responsible for problems with the gauge if the above is not completely followed.
2. Never operate the rod latch with the foot. Use only the hands for all operations, then the Rod Latch can never accidentally be released by mistake.
3. Never omit the Valve Rod. To do so eliminates proper use of the Check Valve, because the Check Valve becomes inoperable.
4. Do not use another type of Check Valve with the Valve Rod.
5. Do not try to use some other type of Control Valve with the Valve Rod. To do so may cause the Check Valve not to close completely. In other words, never use parts other than the true No. 175 parts for replacements on a No. 175 MGM Tank Gauge. The use of any parts other than our No. 175 parts will eliminate our safety features, and prevent the safety of repacking the gauges while under pressure.
6. Do not replace the 175 Check Valve with any other Check Valve because this too would eliminate the safety of repacking the gauge while under pressure.

MGM CANNOT BE RESPONSIBLE IF THE ABOVE IS NOT COMPLETELY FOLLOWED.